

MAINTENANCE NOTES

Stacking sliding units

We recommend conducting routine maintenance (about once a year) by carrying out the following tasks:

- Clean upper tracks (remove dust and deposits from the tracks' surface)
- Adjustment of brush sealing
- Check height adjustment and setting of each single panel
 - Internal projection of glass panel into fitting about 25 mm
- All end caps (with buffers if required) are in place and fixed
- Check if all rollers can be moved easily
- Check if counter nuts and safety screws are adequately fastened
- Check if pin carriers at pivot panel are in the right position
- Ensure that the lower locks can be moved easily
- Check if floor sockets, locking plates are adequately fastened to the floor
- Remove contaminations from floor socket / locking plates
- Ensure that lock and profile cylinder can be moved easily
- For door floor closers: check if they are in a correct and fix position; remove contaminations from the case
- For swivel panels with or without limit stop: position of reversing gear; check if the crank is kept nearby