TEUFELBESCHLAG

Wir machen Glas beweglich !

Mounting instruction for pivot panel of stacking sliding door with transom closer (RTS)

Mounting of fittings onto glass (see sketch):

a. Lay glass (toughened safety glass) onto horse
b. mount upper door rail perpendicularly (distance between lower edge glass and lower edge of upper door rail = panel height - 258mm)
c. mount lower door rail (keep panel height in mind)
d. install cover plates

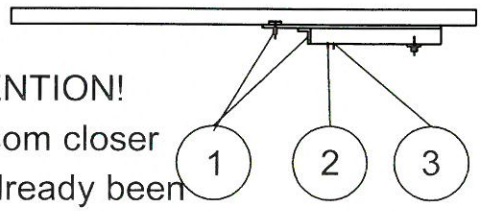

ATTENTION!
Transom closer has already been roughly pre-set.

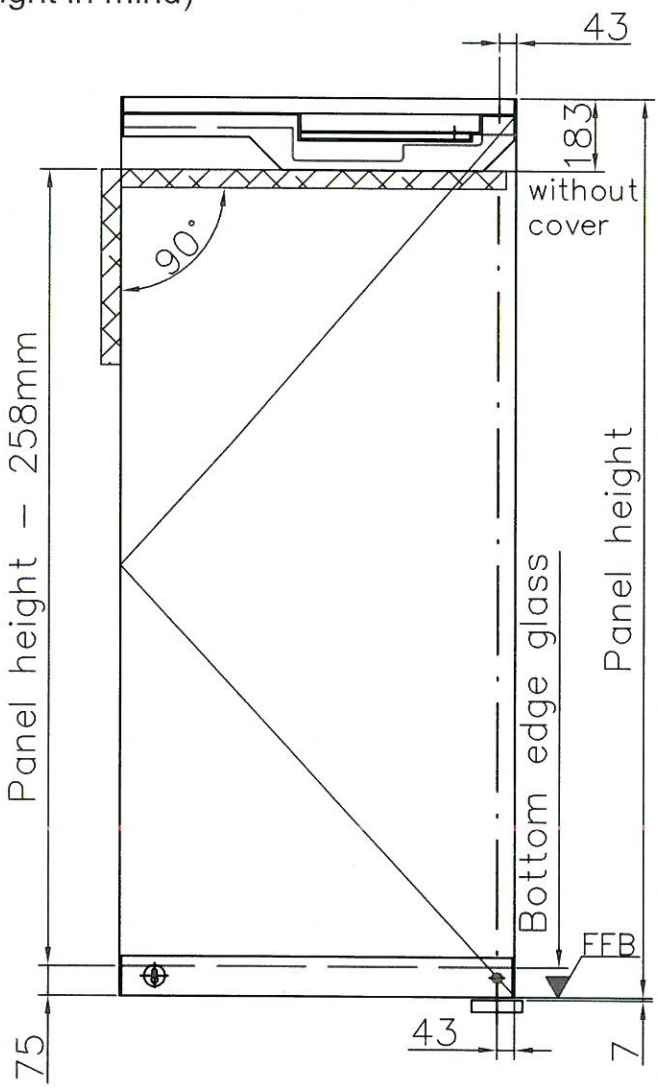

Adjust neutral position:

1 - Loosen fixing screws at transom closer mounting plate, turn eccentric screws left or right (designated neutral position); re-fasten screws

2 - Adjustment of closing damping

3 - Adjustment of closing speed

Mounting of panel in connection with upper track:

a. Move panel into upper track and bring it in the correct position
b. Adjust panel in an exact horizontal and vertical way
c. Mount lower bearing as exactly as possible (in case of incorrect mounting resp. non-observance of the pivot difficulties with the swivel action may occur)